

CONTENTS

PAGE 3	WHAT YOU NEED
PAGE 4-11	COFFEE & MILK CLEAN
PAGE 12-15	CHOCOLATE CLEAN
PAGE 16-17	TIPS
PAGE 18	TROUBLESHOOTING
PAGE 19	NOTES
PAGE 20	CONTACT DETAILS

WHAT YOU NEED...



2 MUGS OF HOT WATER



1 TOPBREWER TABLET



SMALL FOAMER BRUSHES



LONG HANDLED BRUSH



KITCHEN ROLL

COFFEE & MILK CLEAN

MUST BE PERFORMED DAILY



1


OPEN THE STAINLESS STEEL DOOR

On a TopBrewer Pro, open the hinged stainless steel door by pushing the right side until it pops out and pull it towards you.

On a TopBrewer Compact, Open the stainless steel door by pivoting it outwards and sliding it into a horizontal hold position. The machine will go into neutral mode with the bottom piston raised, ready for cleaning.



KEEP DOOR OPEN

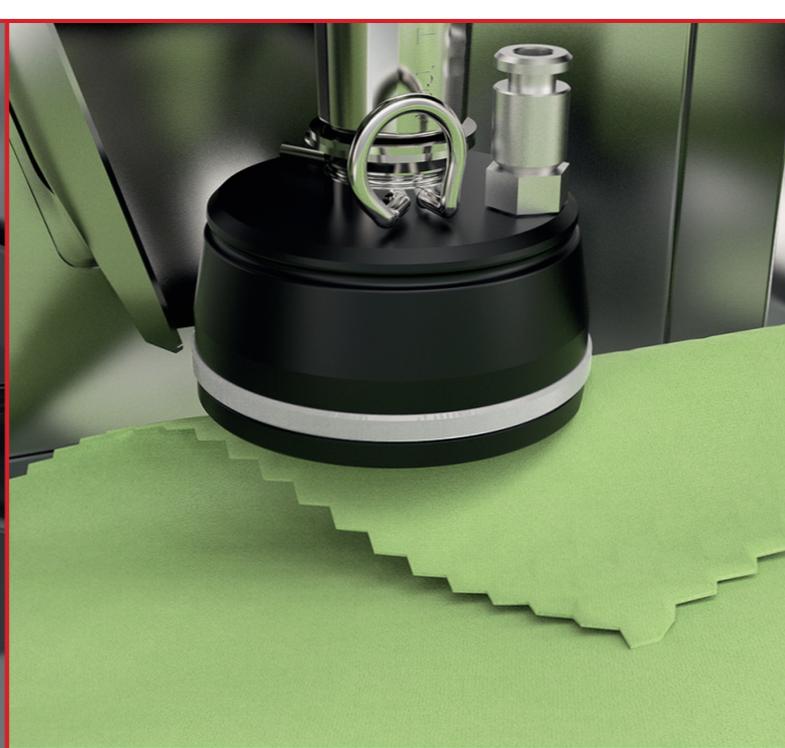

2

MOVE SCRAPER

The scraper can be moved freely to allow access to all components. Pull out the scraper and use the long-handled brush to remove any ground coffee deposits around the grey base plate. Brush the deposits into the dregs bin.



Danger hot

3

WIPE TOP & BOTTOM PISTONS

Having removed most of the coffee grounds, wipe the top & bottom pistons as well as around the piston O-ring with damp kitchen roll.



Danger hot

4

CLEAN PISTON

The stainless steel top and bottom pistons must be completely clean with no coffee remains to minimise the risk of coffee granules getting stuck as this restricts the 'water flow' during the cleaning cycle.

TIP

5

SCRAPER BACK


Move the scraper back into the position shown. Place a TopBrewer cleaning tablet in the middle of scraper arm.



PRO



COMPACT

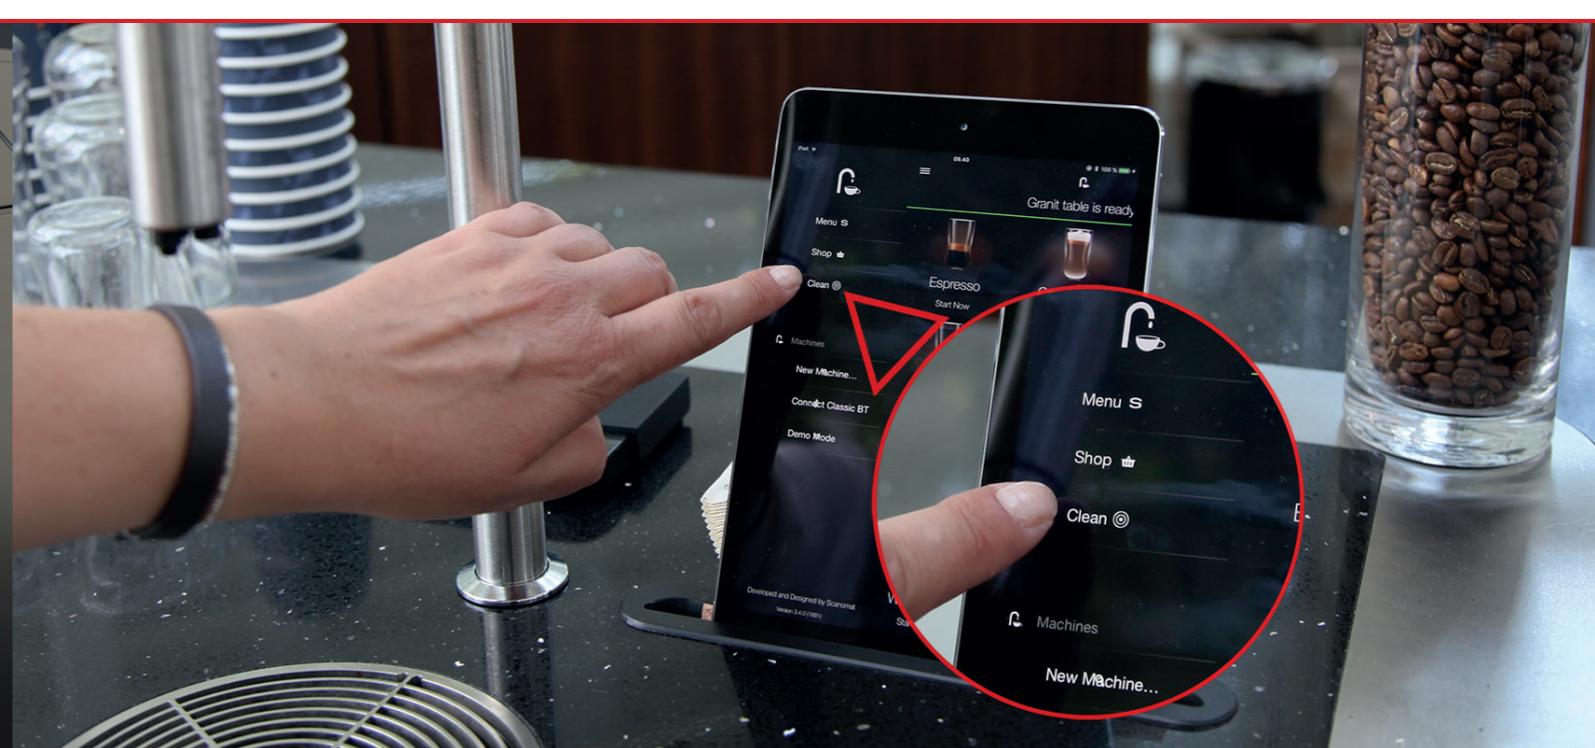

6

INSERT MILK LINE(S) INTO CUP

Place a cup of hot water inside the fridge and place the milk line(s) into the cup.

*Please note if you have a dual-milk fridge, both milk lines need to be placed into the cup.

7

CLOSE THE STAINLESS STEEL DOOR

When all attachments are back into place close the stainless steel door.

8

SELECT CLEAN

Select "CLEAN" from the left pane iPad menu or TopBrewer keypad. Once "clean" is completed, open the door and complete step 3 again (wipe top and bottom piston). The process will take approximately 2 minutes and "Machine is ready" will appear in the status bar in the App once completed.

TIP

You can use the TopBrewer keypad 'clean' button if the iPad is not available.

CLEAN MILK HOUSING AFTER CLEANING PROGRAM

9

REMOVE CASING AND HOUSING

Gently remove the outer metal casing (9.1) of the faucet by twisting the it clockwise and pull down.

Slide down the black housing (9.2).



SKUs for reorder

Housing/milkfoamer

- 1 2011107
- 2 2011106
- 3 2011105

O-rings

- 1 4200446
- 2 2009628
- 3 4200445
- 4 4302169
- 5 990480005000
- 6 4200444

10

REMOVE MILK FOAMER

Unscrew the milk foamer clockwise (10.1).

Separate the two parts of the foamer unscrewing it clockwise (10.2).

Clean the milk foamer and housing in warm water with the tip brushes.

Clean the two holes (red arrows) in nozzle (10.3) with the tip brushes and wipe the nozzle with a damp cloth.

Connect the two parts of the milk foamer again.



11

RE-ATTACH ALL PARTS

Re-attach the milk foamer by screwing it on the outlet anti-clockwise (11.1).

Push the housing back in place (11.2).

Then re-attach the outer metal casing by twisting the metal head anti-clockwise (11.3).



12

DISPENSE DRINK

Prior to use, prime the TopBrewer by dispensing one macchiato or a milk based drink.



! BE EXTRA AWARE !

Take care that the O-rings remain in position during and after cleaning.

CHOCOLATE CLEAN

**MUST BE PERFORMED
TWICE A WEEK**



1

Fill chocolate bottle with warm water.

Close chocolate line by turning lever on pipe horizontally.

Press down grey button on connector and pull chocolate line out.



2

Press grey button again and connect the chocolate bottle. Once grey button clicks and is locked in to place, turn lever vertically in order to open the bottle and allow water through.



3

Select the hot chocolate option from the menu on the iPad.

Repeat this step until water runs clear (this will normally take 2-3 tries).




4

Remove chocolate bottle and place chocolate line back in to position. Open chocolate line by turning lever on pipe vertically.

TIP

Wipe chocolate connector from any water or chocolate residue.

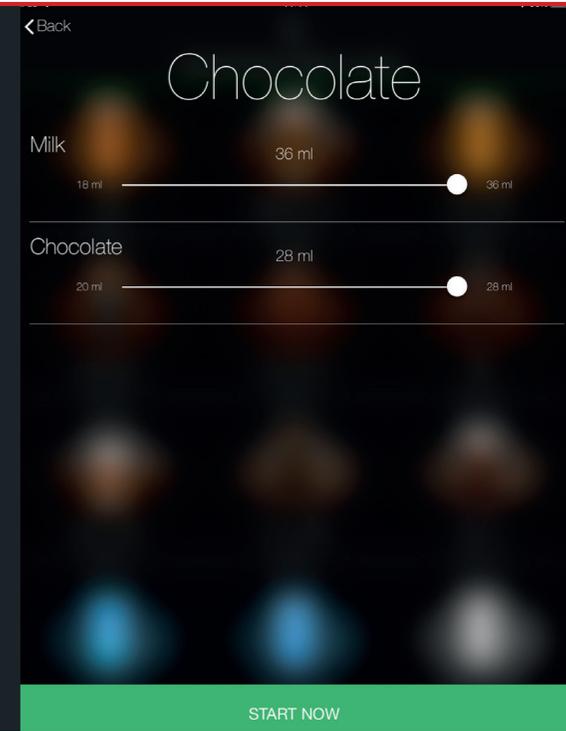


5

Run a few chocolates from the menu until chocolate is back in the line.

TIP

Massage chocolate line for chocolate to return to system faster.

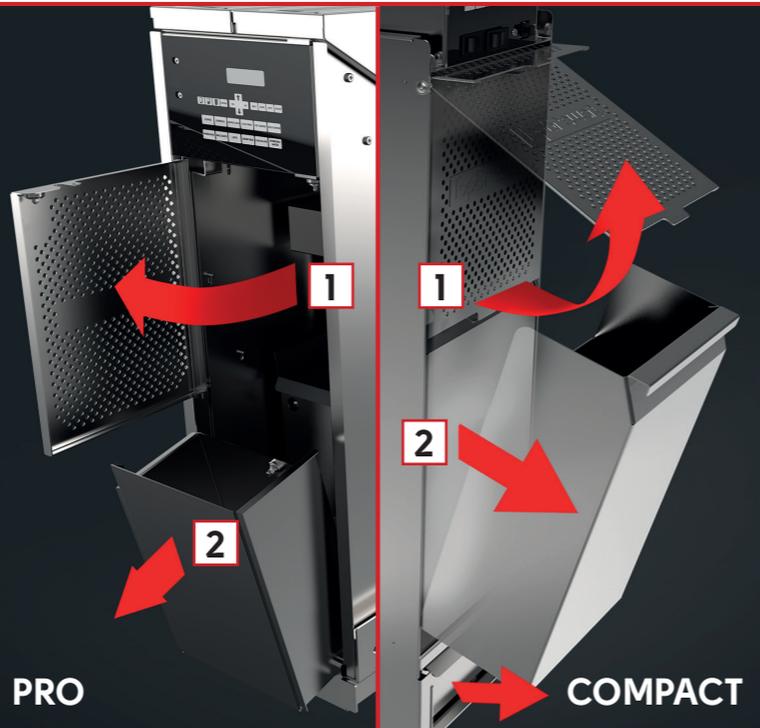

DAILY CLEAN

It is important that a clean cycle is performed daily with a TopBrewer cleaning tablet. Non-cleaning will effect the performance of your TopBrewer and might cause a breakdown.



REMOVE DRIP TRAY GRILL

Rinse with water, wipe around drip tray, dry and replace drip tray grill.



MILK FRIDGE

Wipe milk fridge, fridge seals and milk lines with a clean damp cloth daily to avoid milk stain buildup and odour.



REFILLING COFFEE BEANS

The TopBrewer will notify you when Coffee Beans needs refilling on app screen.



WIPE BEAN HOPPER

Remove lid from bean hopper and wipe with a damp cloth prior to filling it with beans. (Fresh TopBrewer beans have a great flavour, therefore do not overfill the hoppers to allow beans to always stay their best – store unused beans in a sealed bag somewhere cool)



EMPTY DREG BIN

Machine will notify you when the dregs bin containing waste coffee grounds is full. When removing the dregs bin the machine will reset its counting system and will assume that you have emptied it. Therefore empty the dregs bin once removed from the unit.



FRESH MILK

Fill the TopBrewer with fresh milk every morning.



TURNING MACHINE OFF

Turn the machine off when not in use after clean performed. (Weekend, Bank Holiday, etc...)



scanomat

CONTACT US

Technical support, training and barista support: service@scanomat.co.uk

Coffee & accessory orders: neworders@scanomat.co.uk

New equipment sales: sales@scanomat.co.uk

www.scanomat.co.uk