

TopJuicer



Cleaning Manual

TopJuicer



For TopJuicer installed with
Cleaning Programme V3

scanomat

JUICE CLEANING



For TopJuicer installed with
Cleaning Programme V3

Cleaning every 2 days

Cleaning the TopJuicer takes place in two steps:

First, the system is cleaned with a cleaning solution.
Then, the system is rinsed with clean water.

USE CLEANING POWDER, CONTAINER, AND CLOTH



Scanomat Cold Clean SKU 4303243



MIX CLEANING POWDER

Mix 4 scoops of cleaning powder with 2 litres of warm water in the cleaning container.



Ensure the valves on the hoses are closed.



DISCONNECT JUICE

Close the valves and disconnect the hoses from the juice cartons attached to the system. Press down on the grey button and pull the hoses out.



Always ensure that the connectors are clean. If not, clean them with a damp cloth.




CONNECT CONTAINER

Connect the 3 hoses of the cleaning container to the system.



Open the valve by turning it so that it crosses the hose.

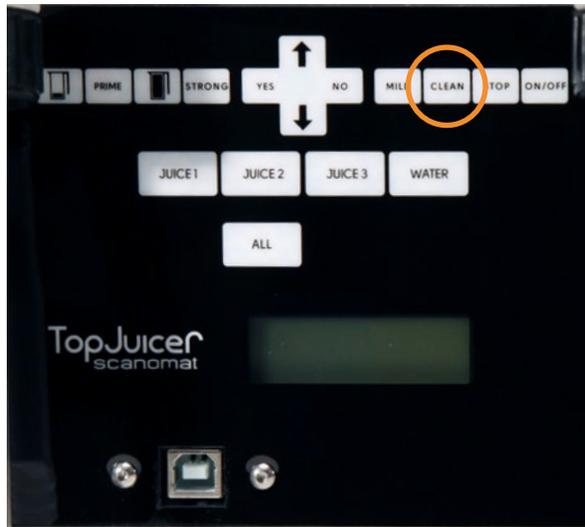

4

START CLEAN

With the cleaning container connected, select the "CLEAN" program on the control panel.

The machine will now run the cleaning solution through all three hoses. This program takes about 10 minutes.



5

RINSE WITH WATER

After the cleaning process is completed, fill the container with 2 litres of cold water.

Press the "PRIME" button in the display and then "WATER" button. The system will now be rinsed with clean water, which takes about 1 minute.



6

RECONNECT JUICE


After cleaning, remove the container and reconnect the juice cartons to the system. Pour one glass of each drink to pump the juice through the system.

The TopJuicer is now ready for use!

MIXER CLEANING

Cleaning every 3 days

USE TIP BRUSHES, BOWL, AND CLOTH

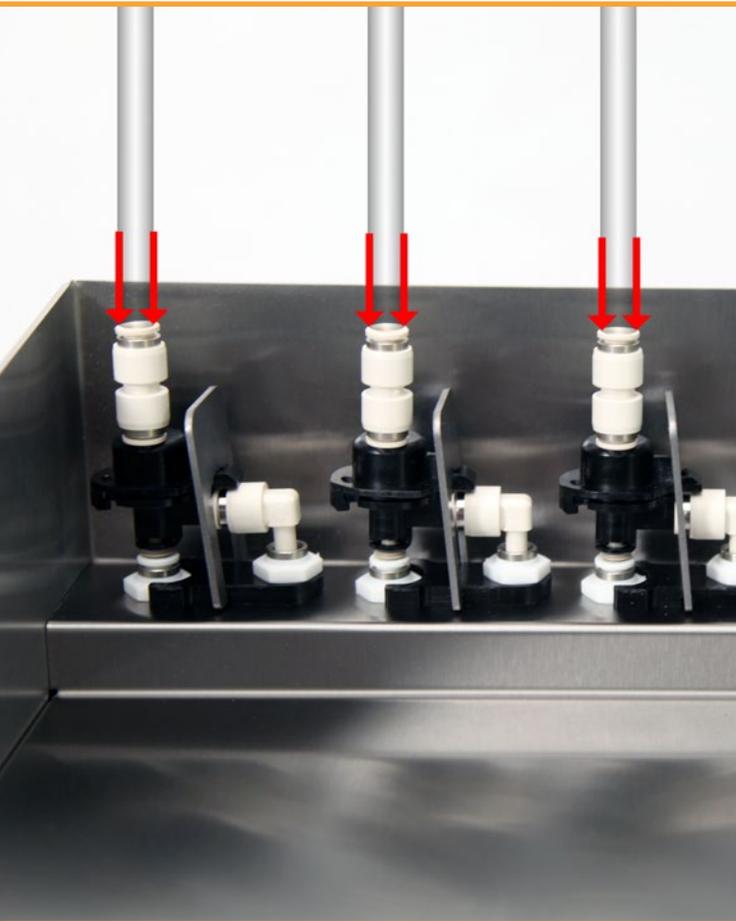


1

DISCONNECT HOSES

First, disconnect the hoses on the mixer housings by pressing the white plastic ring down towards the metal ring and pulling the hose free.

A little water may come from the hoses – wipe it off with a cloth.

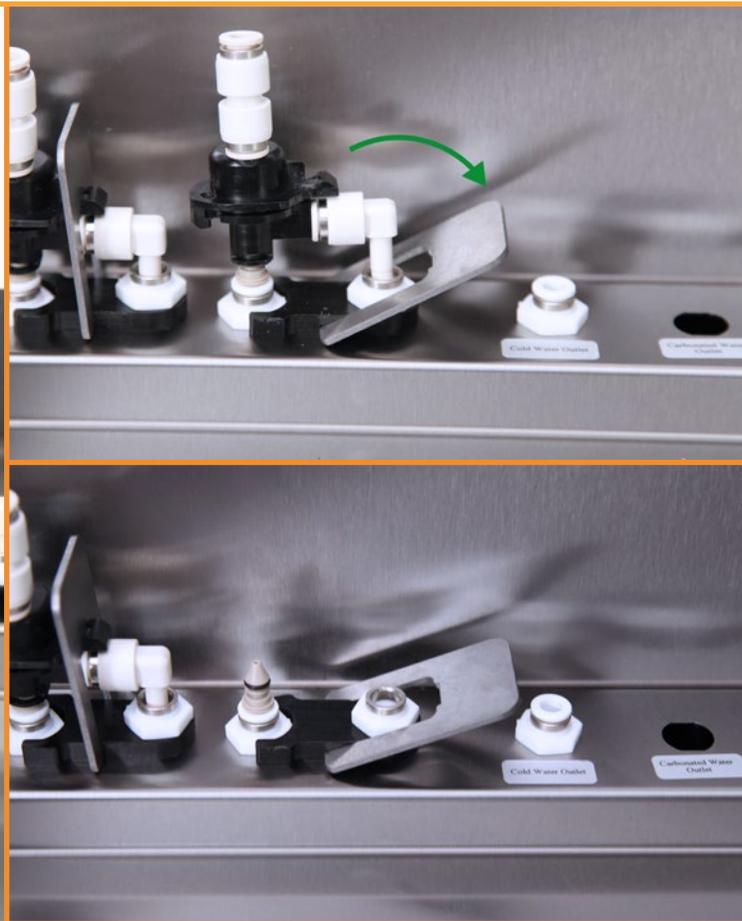


2

DISCONNECT MIXER HOUSINGS

To access the two couplings and mixer housing, tilt the metal plate to the right.

Lift the mixer housing and the two couplings up to release them. Do this for all three mixer housings.

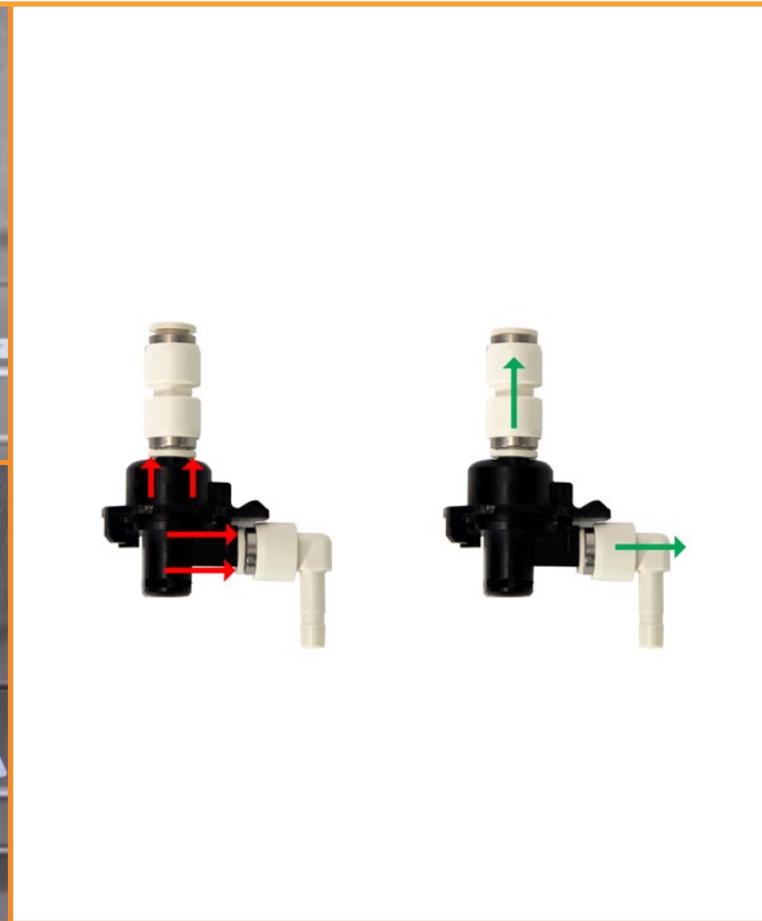

3

RELEASE COUPLINGS

Press the outermost plastic ring on the couplings against the metal ring and release the couplings from the mixer housing.

Release the couplings on all three mixer housings.



4

DISASSEMBLE MIXER HOUSINGS

Rotate the top part of the mixer housing to the left until it meets resistance.

Pull the two parts apart, and the mixer housing will be disassembled.

Do this for all three mixer housings.



5

CLEAN THE PARTS

Clean each part in warm, soapy water using the tip brushes.

Rinse with clean water and dry.

6

REASSEMBLE AND MOUNT

Reassemble all parts in the reverse order of disassembly.

Ensure that the hoses are fully seated in the couplings.

